

ZBT WG1608 4G 5G LTE router users setup configuration installation guide

USER FRIENDLY INSTALLATION MANUAL FOR ZBT WG1608, ZBT WE1326, ZBT WG3526 4G 5G LTE ROUTERS

Put a functional SIM card into the SIM slot (please see picture below).

Please bear in mind that there are 2 types of antennas: LTE and WiFi. Be sure that you're putting in the right antenna to the right slot, can recognize them by **female** and **male** connectors.

After ensuring that everything is in the right place, please first connect your **LAN port** then the **router's DC interface**, please use **12V power adapter**.

Now type into your browsers URL query "**192.168.1.1**" it'll take you to the routers firmware


Passwords are: Viper firmware "**Password1234**" or "**admin**" for OpenWRT

WiFi default password: Viper firmware "**LakeWater561**", in OpenWRT firmware is WiFi without encryption by default.

After getting inside your firmware please go to "Modem > Connection profile" and set your APN to "**internet**" or other APN from your provider and wait at least 5 minutes.

A few of the more common carrier APNs are listed below:


AT&T = BROADBAND
Verizon = VZWINTERNET
T-Mobile = FAST.T-MOBILE.COM
Sprint = R.ISPSN (or, N.ISPSN on some)

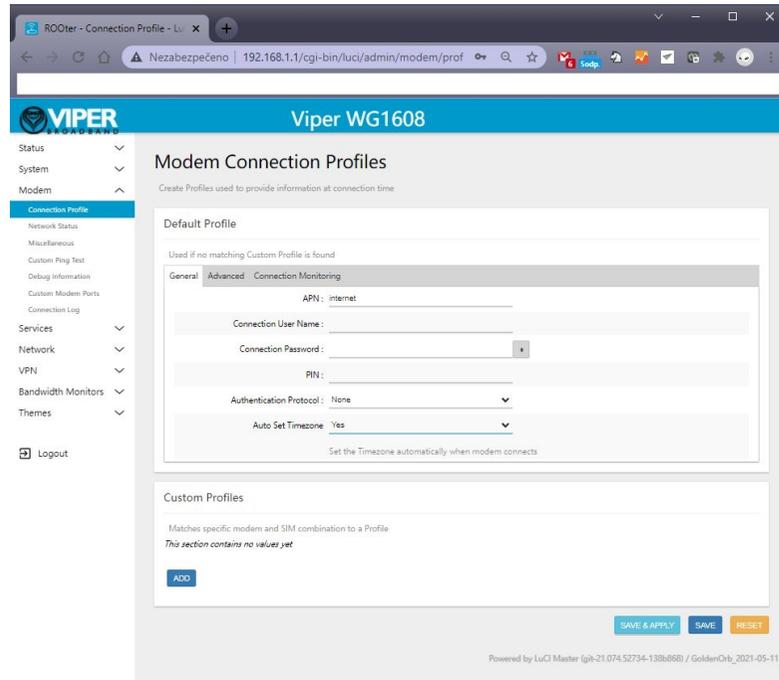

Don't forget to check "Modem > Network Status" to see if your router recognizes:

Your SIM card

Your modem

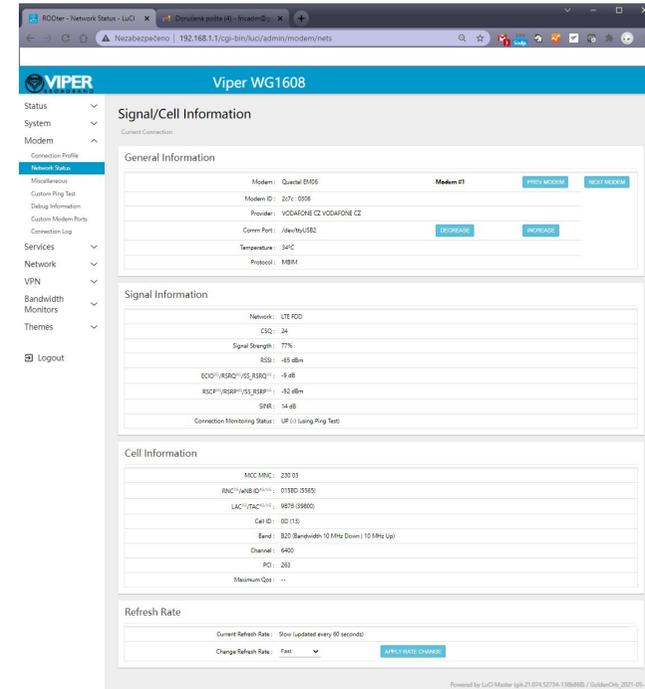

If you see every mentioned option in No. 6 then congratulations!!! Your router is ready to be deployed. We hope that this user manual is helpful. We're trying to keep it as simple as humanly possible.

We set customers own specific settings as long as they're mentioned in the order note.

If you have any more questions, please be sure to contact us at info@524wifi.com.